




Clear Protective Overlay

For

iPhone

4GB

8GB

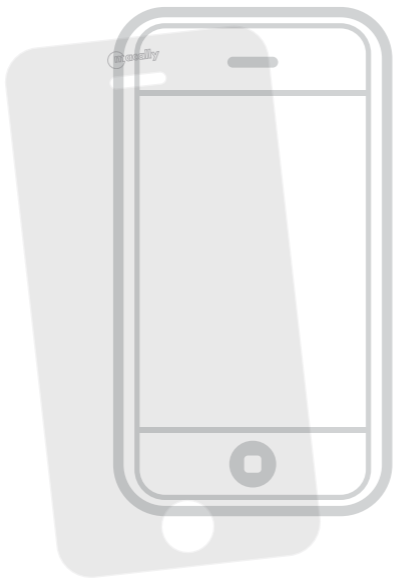


IP-PH804

Instruction


1. Clean iPhone screen with a soft cloth thoroughly to remove any dirt or oil. Make sure the iPhone screen has no dust or oily residue before you start to apply this product.




2. Lay the IP-PH804 on a clean dust-free surface and make sure that Macally logo is in the upper right position. Tape two holding stickers (A) on each edge of the IP-PH804 overlay.

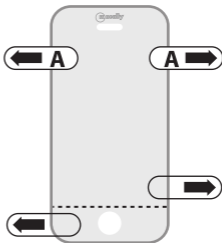


3. Position the IP-PH804 overlay on the iPhone screen along the edges and around the home button.

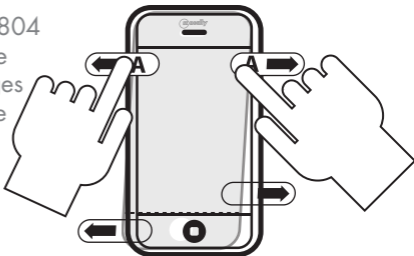


4. Tape both holding stickers (A) to the back of iPhone while ensuring overlay stay nicely fit on iPhone screen.

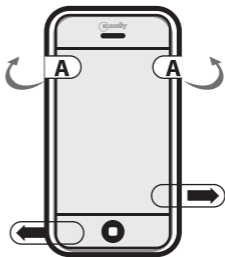



5. Lift the bottom section of the overlay with your left hand, and use your right hand to pull sticker labeled "B" with the base film off to expose the sticky side of overlay.

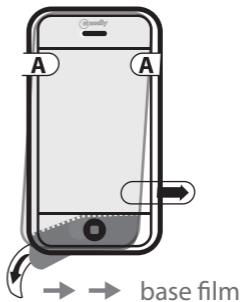

6. Press to stick the bottom section of overlay to iPhone screen thoroughly. While pressing bottom section of the overlay, gently remove two holding stickers (A) from the iPhone and overlay.

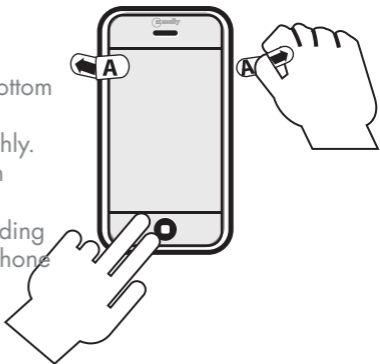

7. Keep pressing the bottom section of the overlay, use right hand to lift up the label "C", and gradually peel off the base film and simultaneously apply the sticky side of the overlay to iPhone screen. Ensure there is no air bubble under the overlay until finished.

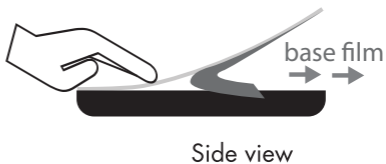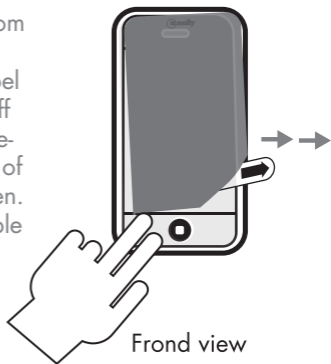

8. Use your fingers to press the overlay firmly on the iPhone screen. iPhone is ready to use.



Finished